

ZDSKV3






Installation Tools Required

Vehicle used for installation:*


Volvo S80 2006 - 2011 Performance Sound System

*Some differences may occur between different car and year models.




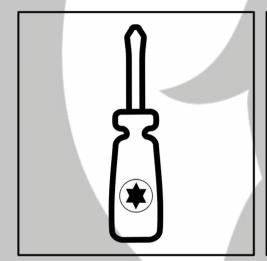


10mm Wrench

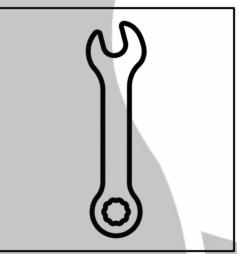


Vrench Plastic Pry Tool

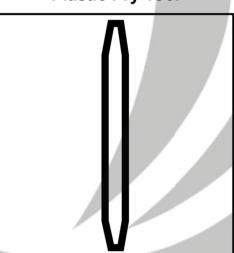

5mm Drill

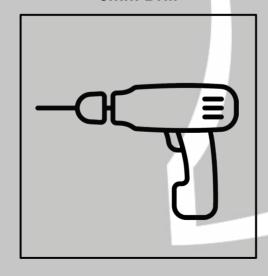





1. Front door panel removal



3. Disconnect the tweeter connector



2. Remove the tweeter pod



4. Remove the screw cover




Tools required:



5. Unscrew the two screws




7. Lift the door panel up

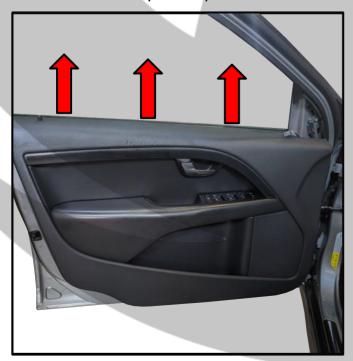

6. Remove the door panel (pull)



8. Remove the door connectors

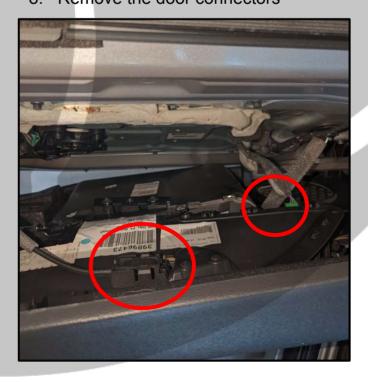



9. OEM Speaker



11. Drill out the OEM speaker



10. Disconnect the speaker connector



12. Take out the nuts and bolts






2x 10mm Wrenches / Sockets

13. Insert the bolt



15. Connect the speaker harness

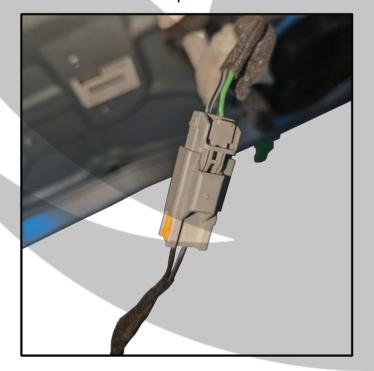

14. Screw on the nuts from the back




16. Route the cable into the adapter





17. Connect the Phoenix Gold speaker

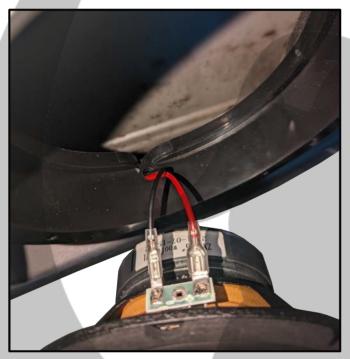

19. Fasten the filter and cables



18. Screw the speaker in place



20. Take out the tweeter and foam ring





21. Put the tweeter in the foam ring




23. Tweeter removed



22. Drill out the OEM tweeter



Make a little cut and peel off the 24. protective film

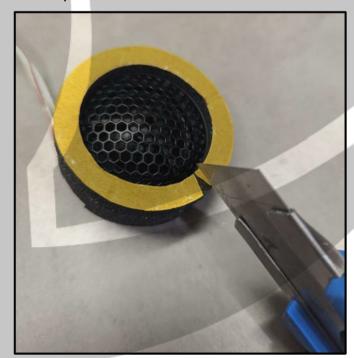


25. Press the tweeter into place



27. Separate these cables (-2dB TW)



26. Add the foam plate

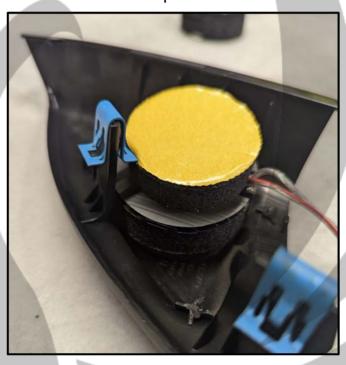

28. Connect the speaker harness



29. Fasten the filter and cables



31. Mount the tweeter pod



30. Reassemble the door in reverse



32. Installation is now complete



On Behalf of the Phoenix Gold team, Thank you for choosing us!

Your installation is complete and we hope that your new upgraded system will bring you joy and happiness for many years to come when listening to your favorite music. As always, our goal is bringing you The Gold Standard in Sound.

