


ZXMSV1

SOT Cable

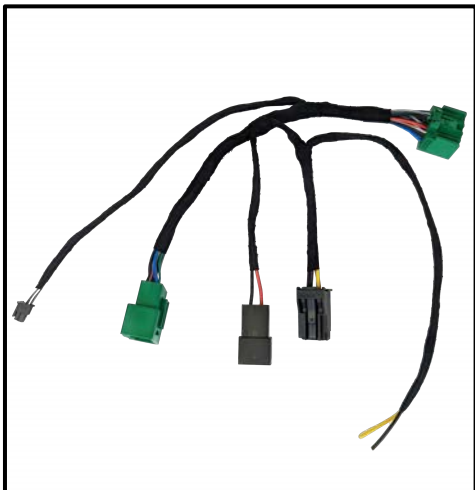

ZXM500.1



Speaker Wire




Installation Tools Required

Vehicle used for installation:*

Volvo XC40 2018 →
High Performance Sound System

**Some differences may occur between different car and year models.*

Allen keys

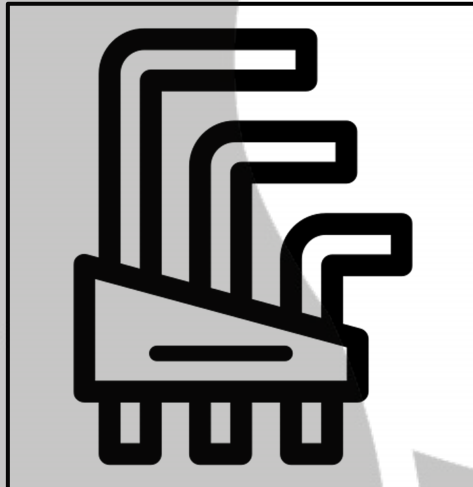

PHOENIX GOLD


ZXMSV1 Installation 1

Tools required:

1. OEM amp under passenger seat



2. Disconnect the two connectors

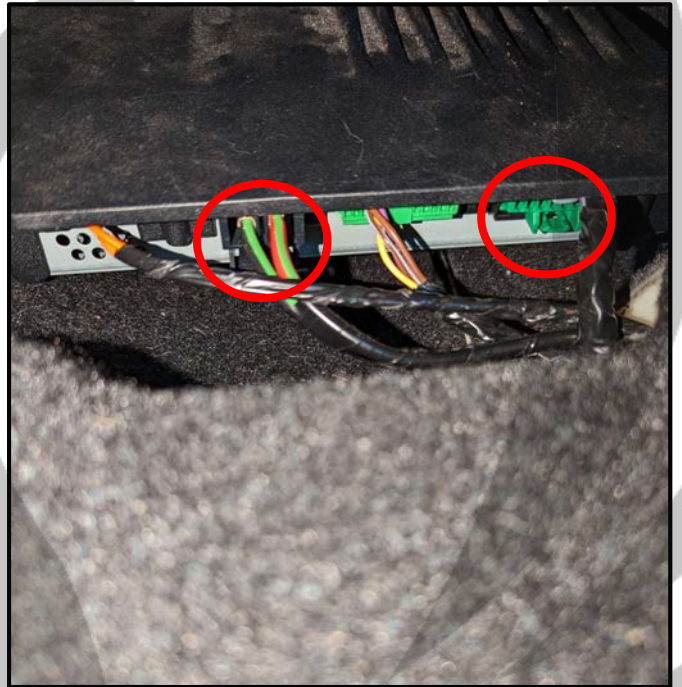

3. Connectors disconnected



4. Bring out the ZXMSV1 amplifier




ZXMSV1 Installation 2

Tools required:



1x Allen Key

5. Connect SOT to ZXM500.1

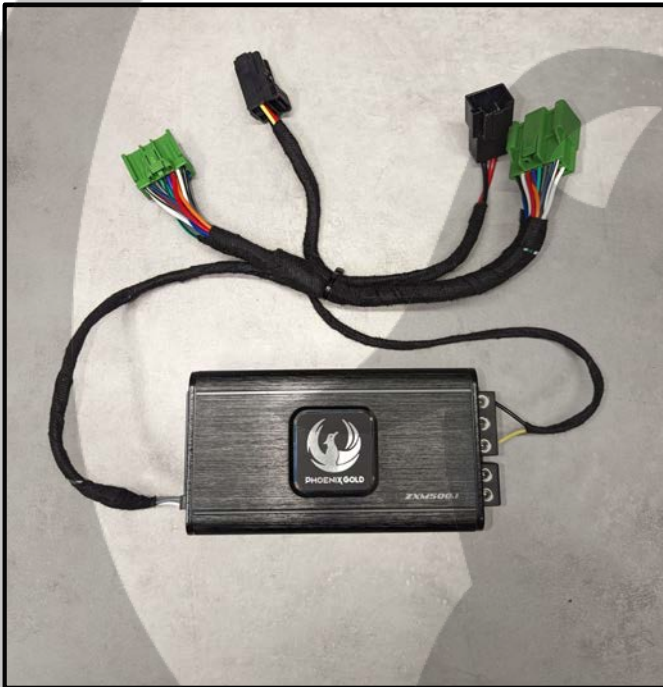

6. Connect the SOT cable



7. Mount the ZXM500.1 amplifier



8. Install is now complete



On Behalf of the Phoenix Gold team,
Thank you for choosing us!

Your installation is complete and we hope that your new upgraded system will bring you joy and happiness for many years to come when listening to your favorite music. As always, our goal is bringing you The Gold Standard in Sound.



www.phoenixgold-eu.com